


BD TWO POLE DISTRIBUTION BLOCK, 100/125 A



CERTIFICATIONS

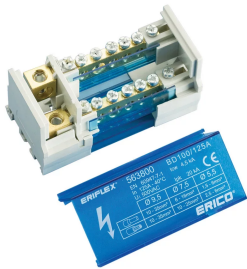

FEATURES

Minimum space for maximum power

Protection cover and insulating screens are transparent

Insulating screen between each row

Easy and safe connections

Input separated from outputs

Wiring with or without terminal

Easily clips onto DIN rail or mounts to panel with screws

RoHS compliant

Conforms to EN 45545 obtaining an HL3 classification for chapter R23 and HL2 classification for chapter R22

Halogen free

SPECIFICATIONS

Table 1/4						
Catalog Number	Article Number	Max Current Rating, IEC	Peak Short Circuit Current (I _{pk})	Line Side Stranded Wire Size - Ferrule	Line Side Compact Stranded Wire Size	Short Term Withstand Current (I _{cw}) 1s
BD-100-125A	563800	125A	30kA	10 – 35mm ²	10 - 35 mm ²	4.5kA
BD-100-125AL	563810	125A	25kA	10 – 35mm ²	10 - 35 mm ²	4.5kA

Table 2/4						
Catalog Number	Article Number	Line Side Number of Connections	Load Side Number of Connections	Load Side Compact Stranded Wire Size	Load Side Stranded Wire Size - Ferrule	Max Working Voltage, IEC (U _i)
BD-100-125A	563800	1	6	(5) 2,5 - 6 mm ² , (1) 10 - 25 mm ²	(5) 1,5 – 6 mm ² , (1) 6 – 16 mm ²	690V
BD-100-125AL	563810	1	14	(11) 2,5 - 6 mm ² , (3) 10 - 25 mm ²	(11) 1,5 – 6 mm ² , (3) 6 – 16 mm ²	690V

Table 3/4						
Catalog Number	Article Number	Height (H)	Width (W)	Depth (D)	Unit Weight	Flammability Rating
BD-100-125A	563800	1.97in	3.7in	1.97in	0.35lb	UL® 94V-0
BD-100-125AL	563810	1.97in	6.38in	1.97in	0.6lb	UL® 94V-0


Table 4/4		
Catalog Number	Article Number	Complies With
BD-100-125A	563800	IEC® 60947-7-1
BD-100-125AL	563810	IEC® 60947-7-1

ADDITIONAL PRODUCT DETAILS

Line side and load side number of connections are per pole.

Design Guideline for Distribution Blocks, Power Blocks and Power Terminals										
Derating according to Ambient* Temperature (°F) to maintain working temperature of 185°F										
Ambient Temperature (°F)	86°	95°	104°	113°	122°	131°	140°	149°	158°	167°
Derating Coefficient (d)	1	1	1	0.94	0.88	0.82	0.75	0.67	0.58	0.47
*environment around the terminal blocks inside the enclosure										

DIAGRAMS

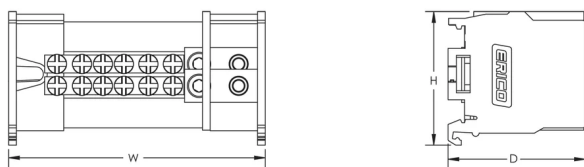

WARNING

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.



Our powerful portfolio of brands:
nVent.com CADDY ERICO HOFFMAN RAYCHEM SCHROFF
TRACER